

FIGURE 1

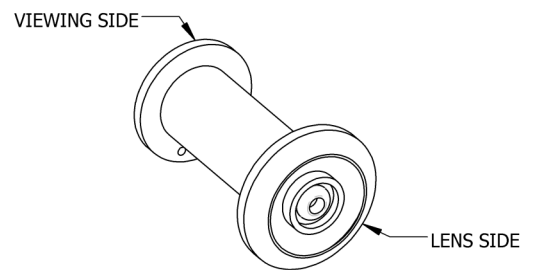


FIGURE 2

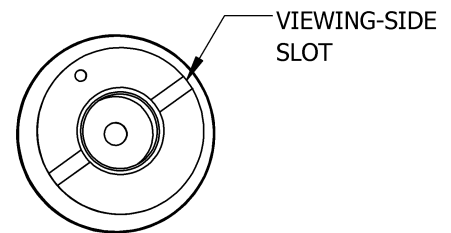


FIGURE 3

1. Determine mounting position on door. Recommended: height of 60" [152 cm] installed in center of the door for standard mount or height of 43" [109 cm] installed in center of the door for ADA accessible door viewer (See Figure 1).
2. Mark the desired position on the door for drilling.
3. Center punch and drill 9/16" pilot hole.
4. Insert the viewing side of viewer into the hole from the inside of the door. Insert the lens side of viewer into the hole from the outside of the door. (See Figure 2)
5. Tighten by placing a flat head screw driver into the slot on the viewing side of the door viewer. Tighten the lens side while holding the viewing side stationary (See Figure 3).
6. Tighten until viewer is secured.