


INSTALLATION INSTRUCTIONS FOR NO. 610 EMERGENCY DOOR STOP

1. Door stop should be mounted on Jamb at the lock side of the door approximately halfway up the height of the door.
2. Mortise hole in Jamb as shown.
3. Mount emergency door stop with counterweight stop in open position and "Top" as indicated.
4. Insert & tighten screws.

Template information on reverse

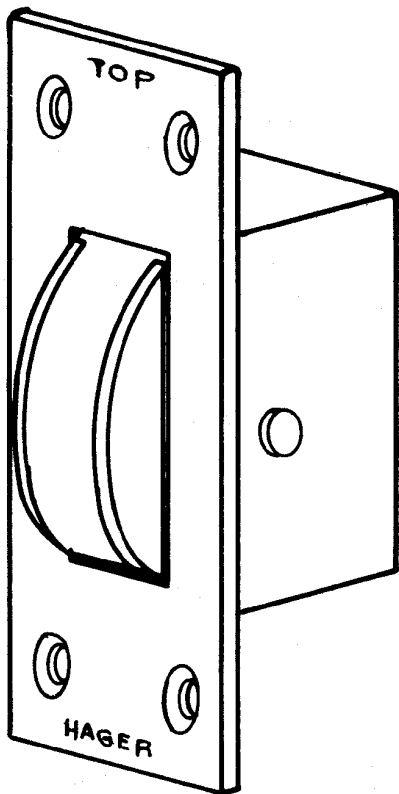

SHOWN WITH COUNTER
WEIGHT OUT -- OPEN POSITION

