



# Edge Guard Installation Instructions

- (1) Place the edge guard over the edge of the door as shown in Figure 1.

\*The edge guard's legs are bent in slightly to fit tightly onto the door.

- (2) With the edge guard lined up evenly with the top of the door mark the position of the top and bottom holes with a center punch. The use of a center punch can help center the holes so that the fasteners will enter straight.

\*A drill may be used to spot these holes while the edge guard is in place.

Note that accurate location is important for proper edge guard installation.

- (3) Remove the edge guard and drill each hole with a 3/32" bit. The accuracy of hole location is improved by drilling a smaller pilot hole first.
- (4) Attach the edge guard to the door at the top and bottom with two #6 x 3/4" FPH tapping screw.
- (5) Drill the balance of the holes and fasten the remaining screws.



Hager Edge Guards are listed with Underwriters Laboratories, Inc.  
Category: Miscellaneous Fire Door Accessories  
File No. R21786


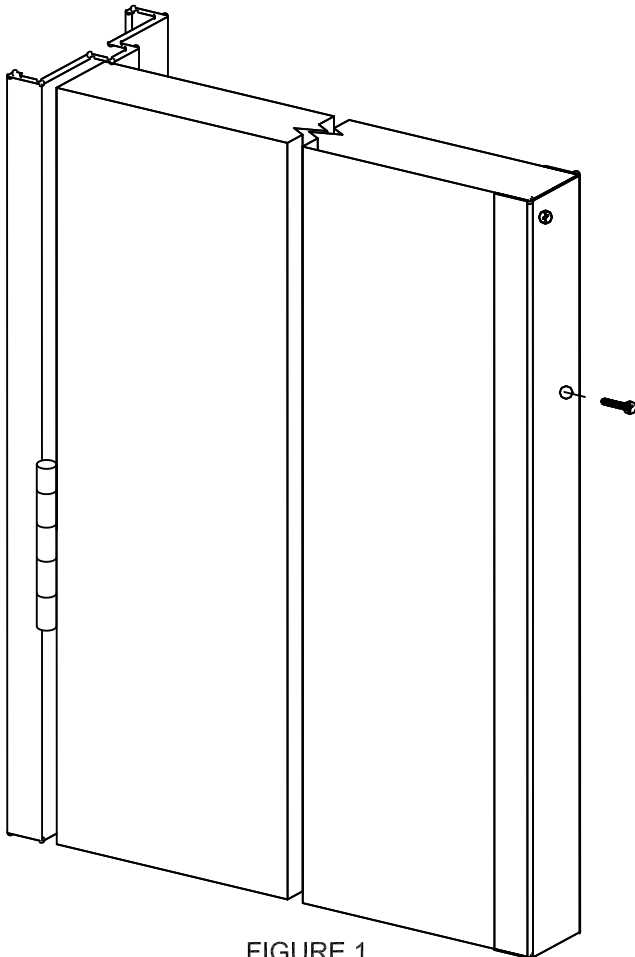


FIGURE 1

## STANDARD HARDWARE

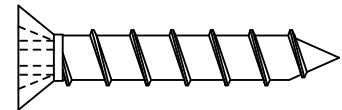

#6 X 3/4" FPH tapping screws